


# LynTec RPC

## Quick Start Guide


- 1 Make sure that the panel(s) have been wired by a certified electrician and that there is power to the panel(s).

Confirm that RPS (slave) panels are connected to the master as indicated in the "RPC to RPS Wiring Instructions" bulletin.


- 2 Confirm that the electrician has connected the 15A breaker in the master panel (position 21) to the power supply in the lower sidecar.

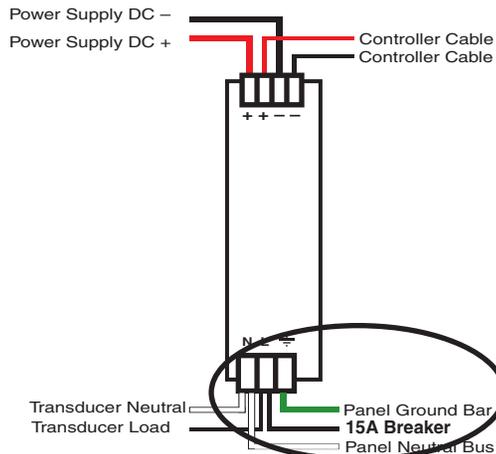


- 3 Once the 15A breaker is connected and switched on, confirm that the orange power LEDs on each circuit board are lit.

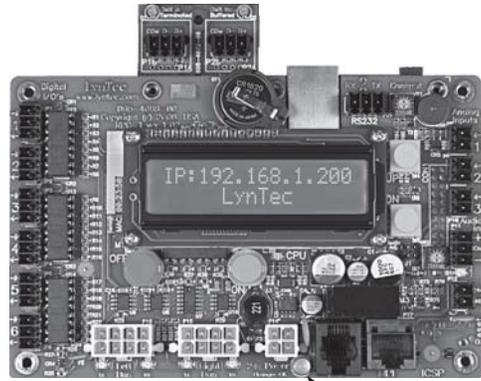

Control Board

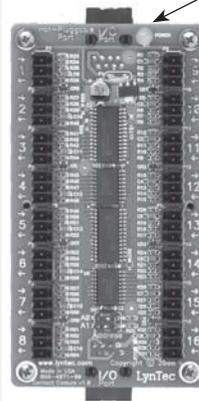

I/O Expander Board

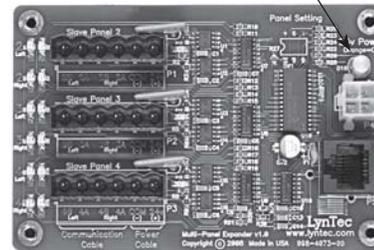


Multi-Panel Expander Board

POWER LEDS

- 4 Connect a computer to the control board using a CAT5 crossover cable OR connect the RPC to your network.

**If connecting via a crossover cable:**

With a computer directly connected to the RPC through the Ethernet port, change the computer's IP address manually so it is in the same default IP subnet that the RPC uses: 192.168.1. The default IP address of the RPC is 192.168.1.250.

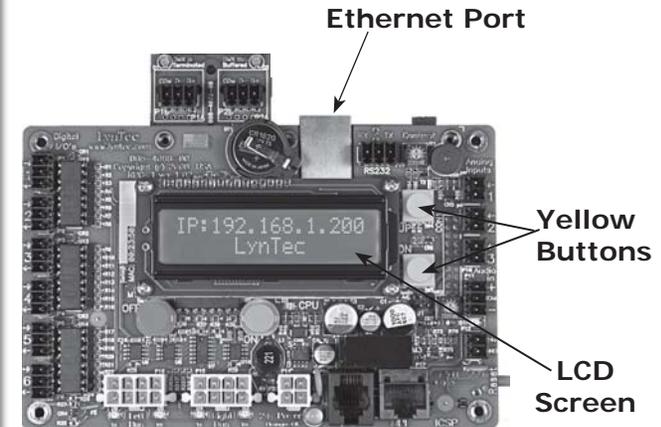

**If connecting via a network:**

Connect the RPC to the network via the Ethernet port. Push the upper yellow button twice or until the IP address appears on the LCD screen.

- 5 Open a web browser and access the status page via the IP address of the RPC.  
(ex. http://192.168.1.250)

**The default username is “admin” and the initial password is “pw”.**

If desired, set your username and password on the “Setup Home” page under the “Setup” tab.

Contact Information	
Serial Number	2
Job Name	Infocomm 2009
Contractor Name	Happy Electric
Phone #	800-GET-RPC1
System Integrator	Smiling Comm.
Phone #	800-ADD-CTRL

Clock Set	
Note: Only changed clock values will be updated.	
Year (##)	9
Month (##)	2
Day (##)	26
Hour (##)	3
Min (##)	8
Sec (##)	45

Printable Pages	
<input type="radio"/> Network Setup	Print Pages
<input type="radio"/> Panel Setup	
<input type="radio"/> Panel Schedules	

Password Reset	
Note: If either username or password update is successful, you will be prompted for login information before the webpage will reload.	
Username	admin
Password	
Repeat Password	

- 6 Complete the RPC setup by following the steps in Chapter 5.