

LynTec XPC

Instruction Bulletin

Xtend Power Controller

Retain for future use.



DISCLAIMER

LynTec shall under no circumstances be held responsible for any loss, damage or injury resulting from the use of the XPC in a manner inconsistent with any of the procedures outlined in this document.

The user is responsible for determining whether this product is appropriate for the intended application.

LynTec is not responsible for any indirect, secondary or ancillary loss or damage, including personal injury, loss of or damage to property or loss of income resulting from the operation or failure of this unit.

Contents

Disclaimer	2
Chapter 1--Introduction.....	5
OVERVIEW.....	5
CONTENTS	5
Hardware Components	5
Software Features	6
Front & Back Panel Overview	7
Chapter Two--Safety Precautions.....	8
Chapter Three--Quick Start Guide	10
Introduction	10
Chapter 4--Wiring.....	11
Emergency Shutdown Wiring:	11
Switch Wiring Instructions	12
LynTec SS-2 Switch Set	12
SS-2PL and SS-2LRP Locking Switch Sets.....	13
Initial Power up procedure.....	14
Chapter 5--Control Setup (Web Page)	15
OVERVIEW.....	15
Status	15
Control	15
Setup	15
Support.....	15
Event Log	15
Setup.....	16
Setup Home	16
Network setup.....	17
Networking Multiple XRS and XRM Units	20
Panel Setup	21
Circuit setup	21
Zone setup.....	22
Global Preferences	26
Setup	26
Labeling	26
Global Control Preferences.....	26
Selecting Circuits for Emergency Shutdown or Brownout	27
Voltage Thresholds.....	27
Schedule Setup	28
Assigning Schedules to Zones	28
Contact Closure Setup.....	29
Assigning Contact Closures to Zones	29

XPC Table of Contents

Individual Momentary Contact ON and OFF Pushbuttons	30
Email Alert Setup	31
Chapter Six: Operating your XPC	32
Using the built-in web page	32
Using a secondary controller	32
Appendix A--Telnet and TCP/IP Protocols	33
Telnet Protocol.....	33
Addressing Scheme	33
Circuit Related Commands	33
Zone Related Commands.....	35
Event Related Commands.....	36
Checksum	38
TCP/IP Protocol.....	38
Circuit Control = B	38
Zone Control = Z	38
Events Control = E	39
Appendix B--Troubleshooting.....	40
Troubleshooting the XPC	40

Chapter 1--Introduction

OVERVIEW

This bulletin explains how to install and operate the LynTec XPC rack-mount controller. This product is a controller only and does not contain circuits. Control signals originate externally from commands received via the communications network or from dry contact inputs. Acceptable communications protocols include HTTP, sACN, DMX-512 and Telnet.

CONTENTS

Hardware Components

Each XPC comes standard with the following hardware components installed:

- Ethernet input
- DMX In & Thru inputs
- Emergency override input
- Four contact closure inputs
- Two outbound circuit outputs
- 24V power supply

Software Features

Each XPC comes standard with the following software features:

- Built-in web server with browser interface for super-easy set up.
- Circuit level sequencing with selectable individual step-rates (25ms to 999s)
- Smart phone, tablet or laptop control and monitoring built in.
- Built in scheduling program with astronomical clock and 84 schedule events.
- Can be interfaced with any control system that communicates individual circuit addresses in HTTP, Telnet, DMX, sACN or contact closure.
- Circuit selectable load-shedding feature for emergency shutoff

Front & Back Panel Overview

Figure 1-1 shows the XPC front panel. A brief description of each part follows in Table 1-1.

Figure 1-1: XPC Front Panel

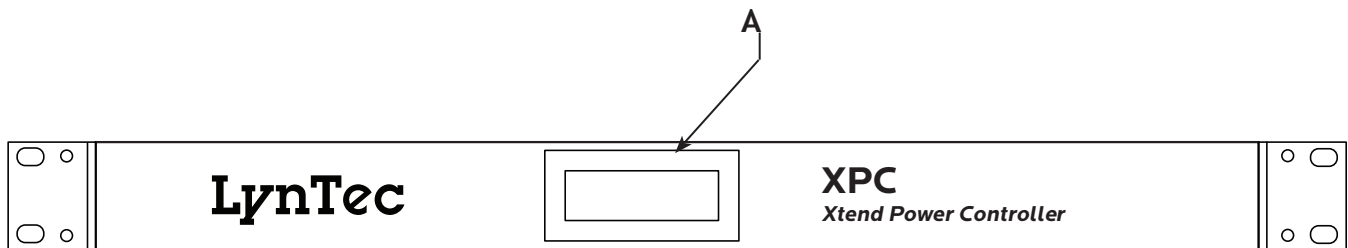


Figure 1-2: XPC Rear Panel

Figure 1-2 shows the XPC back panel. A brief description of each part follows in Table 1-2.

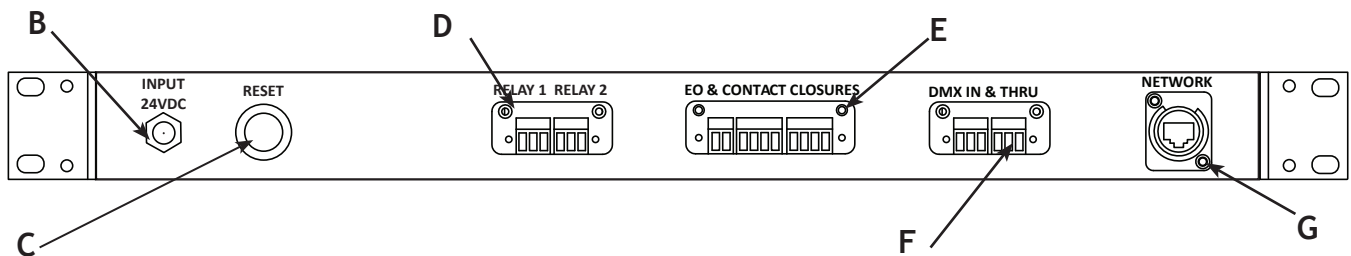


Table 1-2: Parts of the XPC Front & Back Panel

Component	Description
A. LCD Screen	Screen shows the IP address
B. Power Input	Inputs 24VDC
C. Reset Button	Resets the controller.
D. Outbound relays	Outbound relays 1 and 2 rated at 1 Amp at 50V
E. Emergency Override & Contact closure Inputs	One set of contacts for emergency override and four contact closure inputs.
F. DMX Input and Thru	Allows the panel to be directed by a secondary DMX controller. When DMX is enabled, the control page is disabled.
G. Ethernet Port	Connects the panel to a computer or network for initial setup or long-term operation using the built-in web interface. Port also provides sACN connection

Chapter Two--Safety Precautions

This chapter contains important safety precautions that must be followed before attempting to install, service, or maintain electrical equipment. Carefully read and follow the safety precautions below.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- There are no user servicable parts inside the XPC. Do not attempt to service yourself.
- Do not expose the XPC to moisture.
- Do not use outdoors - the enclosure is not rated for outdoor use
- Do not mount near gas or electric heaters.
- Do not feed after midnight.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS

Ce chapitre contient des consignes de sécurité importantes qui Doit être suivi avant d'essayer d'installer, de Maintenir l'équipement électrique. Lisez et suivez attentivement Les précautions de sécurité ci-dessous.

LIRE ET SUIVRE TOUTES LES INSTRUCTIONS DE SÉCURITÉ

GARANTIES IMPORTANTES

Lors de l'utilisation d'équipements électriques, des précautions de sécurité de base Devrait toujours être suivie, y compris les suivantes:

LISEZ ET SUIVEZ TOUTES LES INSTRUCTIONS DE SÉCURITÉ.

- Il n'y a pas de pièces utilisables par l'utilisateur à l'intérieur du XPC. Ne pas Tentez de vous entretenir.
- Ne pas exposer le XPC à l'humidité.
- Ne pas utiliser à l'extérieur - l'enceinte n'est pas évaluée pour l'extérieur utilisation
- Ne montez pas près de gaz ou de radiateurs électriques.
- Ne pas nourrir après minuit.
- L'équipement doit être monté dans des endroits et à des hauteurs Où il ne sera pas facilement soumis à une altération par Personnel non autorisé.
- L'utilisation d'accessoires non recommandés par les Le fabricant peut causer un état dangereux.
- N'utilisez pas cet équipement pour une utilisation autre que prévue

CONSERVEZ CES INSTRUCTIONS

Chapter Three--Quick Start Guide

INTRODUCTION

This chapter is a quick reference listing the steps necessary to install the XPC system. The steps in this chapter are provided as an installation checklist. For complete installation instructions, refer the chapter listed.

Steps	Reference
1. Connect power to the 24VDC input	Chapter 1--Back Panel Overview
2. Connect the controller to a computer or network for panel setup.	Chapter 4--Wiring
3. Access the web page by entering the displayed IP address or NetBIOS name into web browser on a connected computer.	Chapter 5--Control Setup
4. Complete the setup.	Chapter 5--Control Setup
5. Connect the controller to a secondary controller or add contact closures if necessary.	Chapter 4--Wiring Chapter 5--Control Setup
7. If your XPC system does not operate as expected, verify that everything is installed and programmed correctly.	Appendix B--Troubleshooting

Chapter 4--Wiring


Emergency Shutdown Wiring:

To connect your fire alarm or emergency management system to the XPC, follow these steps.

1. From the fire alarm unit or latching Emergency Shutoff switch, wire the contacts to the first pair of inputs on the rear panel. Default is normally-open, but this can be changed to normally-closed or monitored-loop in setup (see Ch. 5)
2. When the contacts change state, all circuits that have been selected for E. Shutoff will cycle to OFF.
3. When the contacts change state all circuits that were ON when E. Shutoff was activated will return to the ON state if “Enable Recovery” is selected (Ch. 5).

See Chapter 5 to configure the software for emergency shutdown.

Figure 4-1: Emergency shutdown wiring

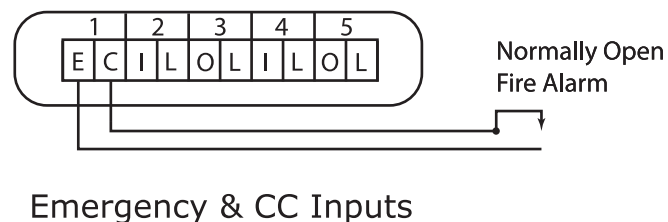

Switch Wiring Instructions

The I/O ports on your XPC controller allow for a variety of switch options.


LynTec SS-2 Switch Set

Using a standard LynTec SS-2 Switch Set with illuminated ON switch. See Figure 4-2

1. Wire the ON switch to Digital I/O port 2 on the rear panel as follows:
 - i. Connect the 24VDC Common to the C pin of the ON switch. Jumper the C pin of the ON switch to the + pin.
 - ii. Connect the Input terminal (arrow pointing towards header) to the NO pin of the ON switch.
 - iii. Connect the Output terminal (arrow pointing away from header) to the - pin of the ON switch.
2. Wire the OFF switch to Digital I/O port 3 on the rear panel as follows:
 - i. Connect the 24VDC Common terminal to the C pin of the OFF switch.
 - ii. Connect the Input terminal to the NO pin of the OFF switch

Repeat on ports 4 & 5 for the second zone

**Figure 4-2
LynTec SS-2 Wiring Diagram**

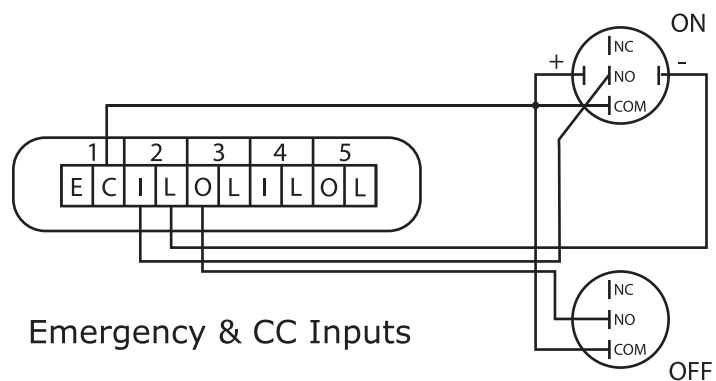


To configure the Digital I/O port and link it to a zone see Chapter 5.

SS-2PL and SS-2LRP Locking Switch Sets

Using a standard LynTec SS-2PL or SS-2 LRP Switch Set with illuminated ON switch. See Figure 4-3

1. Wire the ON switch to Digital I/O port 2 on the rear panel as follows:
 - i. Connect the 24VDC Common to the + pin of the ON switch.
 - ii. Connect the + pin on the on switch to the 1 pin on the lock.
 - iii. Connect the Input terminal (arrow pointing towards header) to the NO pin of the ON switch.
 - iv. Connect the Output terminal (arrow pointing away from header) to the - pin of the ON switch.
 - v. Connect the C pin on the ON switch to the 3 pin on the lock.
2. Wire the OFF switch to Digital I/O port 3 on the rear panel as follows:
 - iii. Connect the 3 pin on the lock to the C pin on the OFF switch.
 - iv. Connect the Input terminal to the NO pin of the OFF switch

Figure 4-3

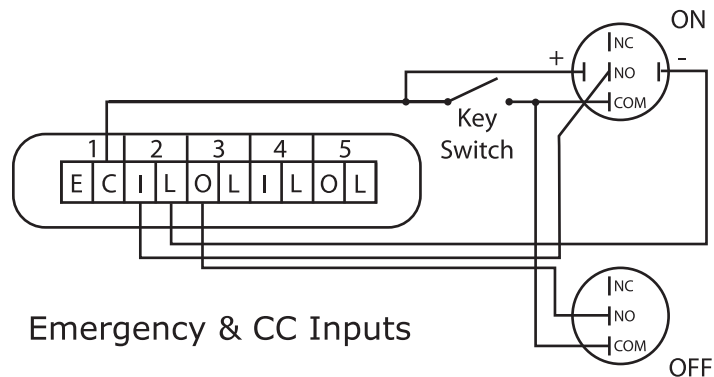

To configure the Digital I/O port and link it to a zone see Chapter 5.

INITIAL POWER UP PROCEDURE

Connect a computer with an Ethernet port and installed web browser program to the XPC Network connector using the provided crossover cable. Then enter the IP address displayed on the front panel.

Chapter 5--Control Setup (Web Page)

OVERVIEW

There are 5 main tabs on your XPC web page. This page will give you a quick overview of the pages and their functions.

STATUS

The status page allows you to view the current status of the circuits and zones. Zones and individual circuits cannot be manipulated from this page.

CONTROL

This page allows the user to manipulate individual circuits as well as circuit zones. “All ON/OFF” and “Hurry-Off” commands can also be triggered from this page.

SETUP

The setup section allows you to setup and use the XPC controller. From this section you can manipulate the network settings, assign circuits to zones, create sequences, activate emergency management features, create schedules and assign contact closures.

SUPPORT

This page provides contact information for LynTec.

EVENT LOG

This page provides a log of events.

Setup

This section will guide you through the process of setting up your XPC Controller. First enter the IP address or NetBios name into your web browser. When the XPC screen pulls up. Select “Setup” and “SetupHome” Tabs.

SETUP HOME

Figure 5-1--Setup Home

To set the username and password for your panel, click the Setup tab. The Setup Home tab should be displayed. The default username displayed is “admin” and the password fields is “pw”. Enter the desired username in the first field, password (without spaces or symbols) in the second and then retype the password again in the third field. When ready, click the Update Login Info button to save the changes to the controller’s memory. Note: Password can be any 2-8 character string.

Contact information for service can also be entered on this page. Under the Serial Number field, enter the name and phone number of the installing contractor (Electrician) and the system integrator (A/V Technician) for future reference. Save this information by clicking the Update Information button below the Clock Set portion of the window.

Basic date and time information will be displayed in the Clock Set fields. Verify that the year, month and day are correct. Set the hour to the appropriate time for your time zone and verify that the minute displayed is correct. Save this information by clicking the Update Information button below the Clock Set portion of the window.

Click the radio buttons for any pages to be printed out under the Printable Pages header. To print the Network Setup, Panel Setup or Panel Schedules pages at any time, ensure the desired buttons have been selected and then click the Print Pages button to the right. Please print a copy for your records after setup is complete.

Network setup

Figure 5-2--Network Configuration

Figure 5-2 shows the network configuration portion of the Network setup.

Network Configuration			
Hostname	LYNTECRPC220		
Enable DHCP	<input checked="" type="checkbox"/> <i>If checked, DHCP is enabled. This module will automatically be assigned an IP, Subnet and Gateway address.</i>		
IP Address:	192.168.1.111	DNS1:	192.168.1.254
Subnet Mask:	255.255.255.0	DNS2:	0.0.0.0
Gateway Address:	192.168.1.254	MAC Address:	00:23:50:01:02:18

This screen shows the current network values. If DHCP is enabled then the fields will be greyed out. It is recommended that the user consult with the network administrator before changing these values.

The IP, Subnet and Gateway addresses are only used in the following situations:

- When DHCP is disabled
- When DHCP is enabled, but there is no DHCP server available on the network
- When the XPC provides DHCP addresses

If DHCP is enabled and available on the network, all these values will be obtained from the DHCP server.

If DHCP is disabled and a static address is used, save changes and then press “Reset RPC” or the reset button on the controller to apply changes.

Figure 5-3: Interface options

Parameters	
Port Type	<input type="radio"/> RS232 Baud Rate: 115200 ▾ OFF threshold: 63 (0-255) or 24 % (valid range: 0 to 190) ON threshold: 191 (0-255) or 74 % (valid range: 64 to 255)
	<input type="radio"/> DMX512 (valid range: 1 to 512)
	<input checked="" type="checkbox"/> Set 1: 1st Address 1 (default) Loss of Signal Options <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
	<input checked="" type="checkbox"/> Set 2: 1st Address 1 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
	<input checked="" type="checkbox"/> Set 3: 1st Address 1 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
	<input checked="" type="checkbox"/> Set 4: 1st Address 1 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
	RDM <input type="checkbox"/> (E1.20) Remote Device Management
	<input checked="" type="radio"/> sACN (E1.31) (valid range: 1 to 63999) (1 to 512)
	<input checked="" type="checkbox"/> Universe 1: 1 (default) 1st Address: 97 Loss of Signal Options <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
	<input checked="" type="checkbox"/> Universe 2: 2 1st Address: 481 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF
<input type="checkbox"/> Universe 3: 1 1st Address: 1 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF	
<input type="checkbox"/> Universe 4: 1 1st Address: 255 <input checked="" type="radio"/> No Action <input type="radio"/> ON <input type="radio"/> OFF	
RDMnet <input type="checkbox"/> (E1.33) Remote Device Management	
Save Changes	<input type="button" value="Save"/>
Reboot RPC	<input type="button" value="Reboot RPC"/>

Port Type

The port type section is used to select the preferred communication protocol. The controller defaults to Ethernet (TCP/IP) for setup but can be controlled in conjunction with sACN or DMX-512 protocols.

DMX

For DMX operation use the following steps:

The XPC allows up to four different sets of DMX starting addresses within a single universe.

In the first set, enter the first circuit address. All circuits need to be assigned addresses manually. Do this by clicking on each circuit in the order you would like them to be addressed. If you need to skip an address or group of addresses, simply create a new zone and enter the desired starting address. If you would like the XPC to automatically assign circuits to consecutive addresses, you may change that in the

Streaming ACN E1.31

For sACN operation use the following steps:

The XPC allows up to four different universes with sACN operation.

First, assign a number to the universe.

In the first set, enter the first individual circuit address. All circuits need to be assigned addresses manually. Do this by clicking on each circuit in the order you would like them to be addressed. If you need to skip an address or group of addresses, simply create a new zone and enter the desired starting address. If you would like the XPC to automatically assign circuits to consecutive addresses, you may change that in the “Panels” tab.

Please note that selecting sACN/DMX control for a circuit or zone, will disable web browser or contact closure control for that circuit/zone. Although, circuit/zone status may still be monitored by web browser or smartphone.

DMX and sACN are exclusive and cannot be used on the same controller at the same time. Either can be used to control circuits in zones while other zones are controlled by IP commands or contact closures.

NETWORKING MULTIPLE XRS AND XRM UNITS

Up to 9 XRS and XRM units may be networked together to allow for zoning and sequencing across all units. To connect XPCs together use the following steps:

1. Connect all Xtend units to the network on the same subnet.
2. The XPC will be the “master” unit.
3. In the web interface click the “Setup” tab and then the “Network” tab.
4. Under “Master/Remotes IP Configuration” enter the IP address for each remote unit.

Figure 5-3.1: Master/Remotes IP Configuration

Master/Remotes IP Configuration			
Note: Any changes here will not be reflected in the panels configuration until "Scan New Circuits" is run and changes are accepted.			
Master	<input checked="" type="checkbox"/> Control up to 9 remote units	Remote 5:	<input type="text" value="0.0.0.0"/>
Remote 1:	<input type="text" value="192.168.1.105"/>	Remote 6:	<input type="text" value="0.0.0.0"/>
Remote 2:	<input type="text" value="0.0.0.0"/>	Remote 7:	<input type="text" value="0.0.0.0"/>
Remote 3:	<input type="text" value="0.0.0.0"/>	Remote 8:	<input type="text" value="0.0.0.0"/>
Remote 4:	<input type="text" value="0.0.0.0"/>	Remote 9:	<input type="text" value="0.0.0.0"/>

Panel Setup

This section explains how to setup your XPC for remote operation.

CIRCUIT SETUP

To add remote Xtend modules to the interface, follow these steps:


1. Under Setup, go to the Panels tab.
2. Click the “Scan Circuits” button.

Figure 5-4

Panel 1	
1	
2	
3	
4	
5	
6	
7	
8	

3. If panel configurations are correct, click “Accept Changes”
4. Assign names to the circuits. (Figure 5-5)

Figure 5-5

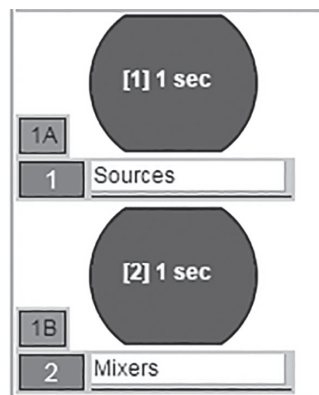


ZONE SETUP

Circuits can be controlled individually or arranged into zones. Circuits in zones can be toggled at 25 ms intervals (Grouped Operation), at variable intervals (Sequenced Operation), or via DMX or sACN.

To setup a Zone follow these steps:


1. Choose which zone you would like to edit. (Figure 5-6)

Figure 5-6

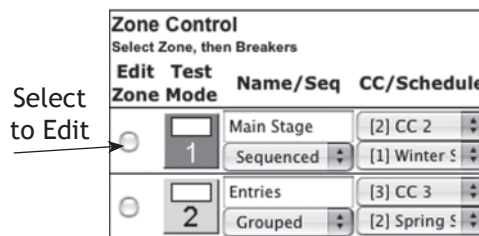

2. Name the Zone. (Figure 5-7)
3. Choose Grouped, Sequenced, DMX or sACN operation.
Note: DMX and sACN may not be used within the same XPC (Figure 5-7)

Figure 5-7

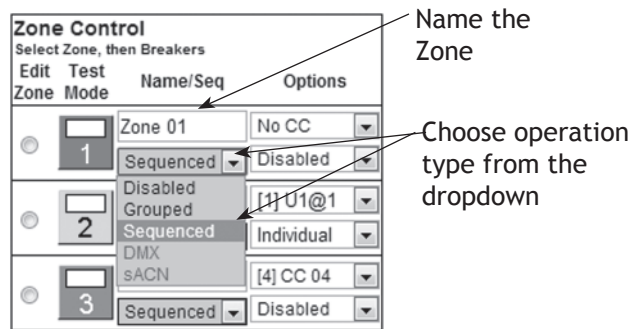

4. If using DMX or sACN operation, select the address set (Figure 5-8) or universe (Figure 5-9) from the

Figure 5-8



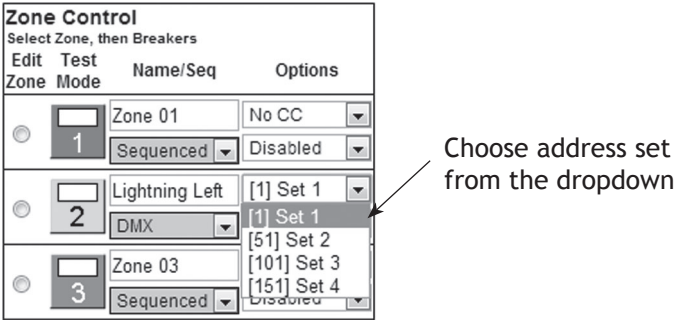


Figure 5-9

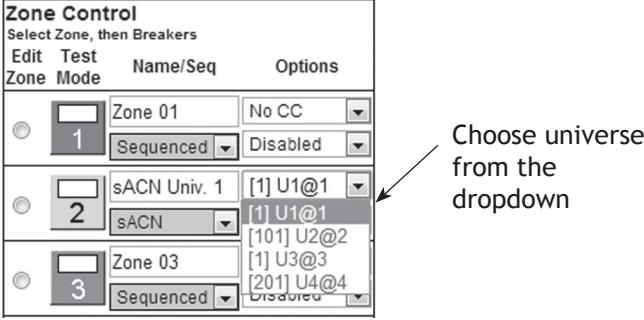

5. Select a circuit to add to the zone by clicking on the circuit you want to add. (Figure 5-10)

Figure 5-10

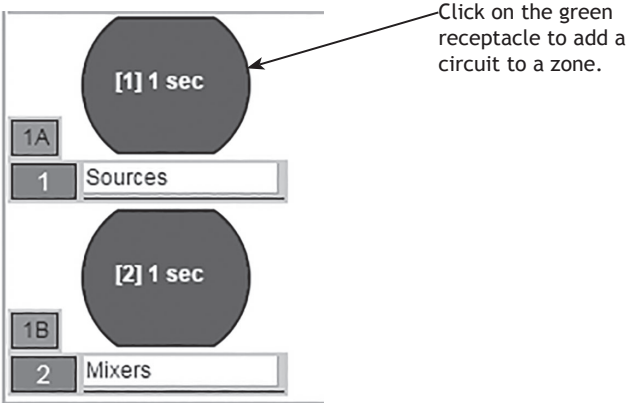

6. Select the position of the circuit in the zone. This set the order in which they turn on and off. Or in the case of DMX or sACN, the address order. (Figure 5-11). Note: DMX and sACN zones default to individual addressing. If you choose "All Available" the entire panel or panels will change to DMX or sACN.
7. For sequenced operation, select a delay time from the dropdown. Circuits in grouped zones toggle in 25ms intervals. (Figure 5-11) Delay time is the amount of time after a circuit changes state, before the new circuit in sequence changes state. If using one of the custom delay settings, enter the desired delay time in the custom delay setting field. (Figure 5-12)

Figure 5-11



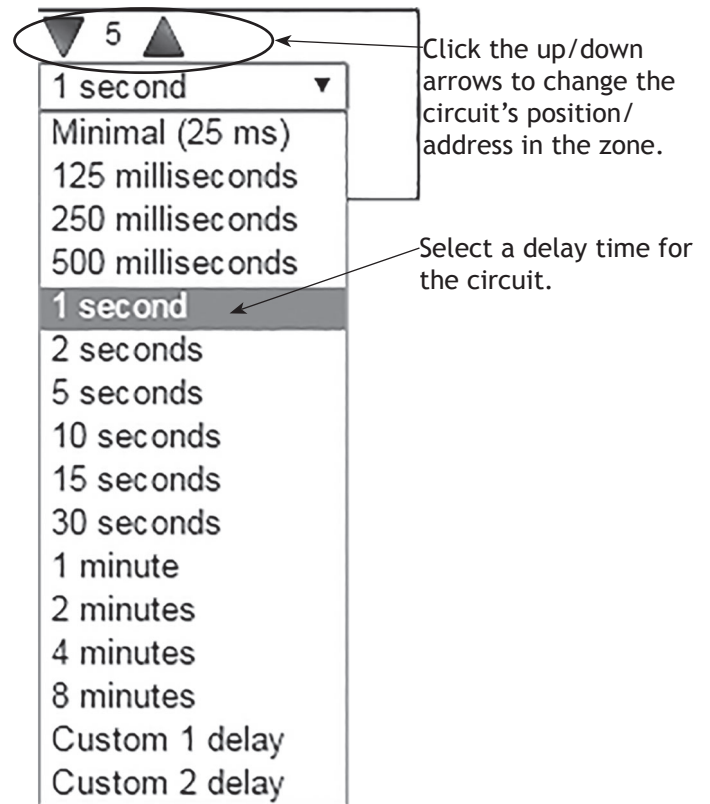


Figure 5-12

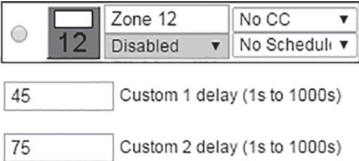

- 8. Click the “Close” button when finished to save. Or, click “Remove” to remove the circuit from the zone.
- 9. When finished adding circuits to the zone, click the “Test Mode” (Figure 5-13) button to do a blind test (circuits will not actually toggle). Please note that delay times larger than one second are reduced to one second in Test Mode for expediency.

Figure 5-13

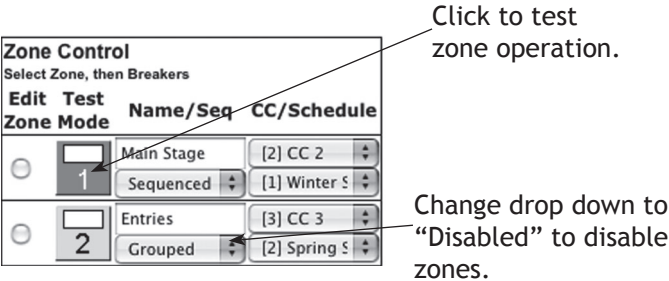

- 10. Disable zones that are not in use so they do not appear in the status and control pages (Figure 5-13).
- 11. Click “Save Changes” (Figure 5-14) to save zone information when finished.

Figure 5-14



GLOBAL PREFERENCES SETUP

This section guides you through the setup process for the many features and preferences in your XPC system.

Labeling

In addition to labeling circuits, each unit in your XPC system can be named (up to 16 characters). (Figure 5-15) For multi-unit systems, scroll down to see additional panels/units.

Figure 5-15



Global Control Preferences

The following features can be selected for additional system flexibility

Figure 5-16

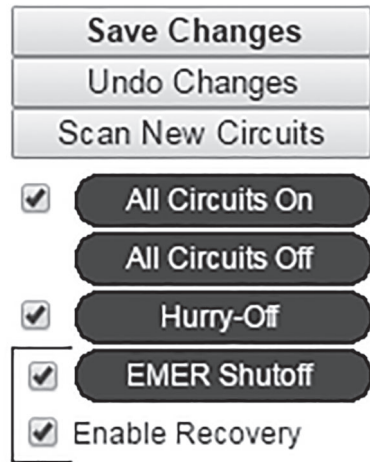


Table 5-1

All Circuits On/Off	Turns all the circuits on or off by order of zone and sequence
Hurry-Off	Turns circuits off rapidly without sequencing
E. Shutoff	Turns selected circuits off when external contacts or emergency management system activates (uses I/O CC#1)

Schedule Setup

Follow these steps to set a schedule (not compatible with DMX or sACN).

1. Enable Schedules in Setup Home tab
2. Rename each schedule as desired
3. Assign weekday (M-F) on and off times by clicking on time and off time buttons, using pull-down menu and clicking the pick button to select.
4. Assign weekend (S-S) on and off times by clicking on time and off time buttons, using pull-down menu and clicking the pick button to select.
5. Enable each schedule by clicking the checkbox for that line.

Figure 5-17


Schedule Name	Enabled	Monday - Friday		Weekend	
		On Time	Off Time	On Time	Off Time
Winter Schedule	<input checked="" type="checkbox"/>	On Time: 10:15 am	Off Time: 5:15 pm	On Time: 10:00 am	Off Time: 3:15 pm
Spring Schedule	<input checked="" type="checkbox"/>	On Time: 10:15 am	Off Time: 5:15 pm	On Time: 10:00 am	Off Time: 3:15 pm
Summer Schedule	<input checked="" type="checkbox"/>	On Time: 10:15 am	Off Time: 5:15 pm	On Time: 10:00 am	Off Time: 3:15 pm
Fall Schedule	<input checked="" type="checkbox"/>	On Time: 10:15 am	Off Time: 5:15 pm	On Time: 10:00 am	Off Time: 3:15 pm

Assigning Schedules to Zones

To assign a schedule to a zone in the “Panel” screen:

1. Select the desired zone from the drop down box.
2. Save changes.

Figure 5-18

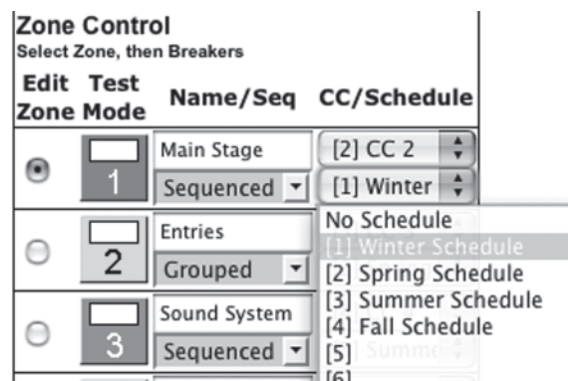

Contact Closure Setup

Configure the digital I/O port and link it to a zone as follows:

Note: If the Emergency Shutoff feature is selected, the first position in the Onboard field (on the Controller) is automatically assigned to that.

1. Rename each contact closure as desired
2. Select contact closure action type
3. Use CC Module 1 and CC Module 2 only if I/O Expander boards are installed.
4. Save Changes

Figure 5-19


Save Changes			
Onboard			
	Name	Action	Merge
11	Emergency Shutoff	Maintain N.O. ▼	
22	Parking Lights	Momentary N.O. ▼	U
33	CC 03	Momentary N.O. ▼	M
44	CC 04	Momentary Toggle ▼	M
55	CC 05	Momentary Toggle ▼	

Assigning Contact Closures to Zones

To assign a contact closure to a zone in the “Panel” screen:

1. Select the desired zone from the drop down box.

Figure 5-20

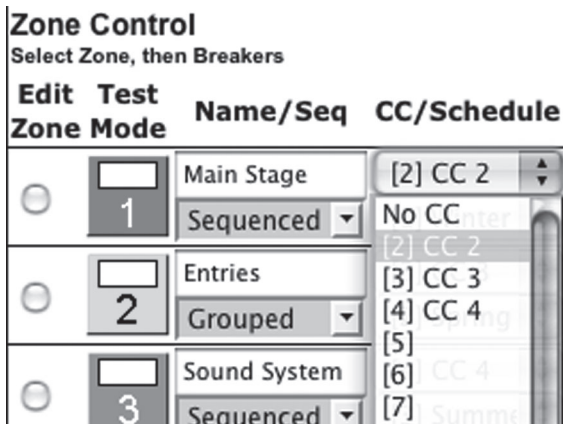

Individual Momentary Contact ON and OFF Pushbuttons

Using a standard LynTec SS-2 Switch Set with illuminated ON switch or two illuminated pushbuttons:

Configure the Digital I/O port and link it to a zone as follows:

1. Follow the previous instructions for naming the contact closure and setting closure type.
2. Click the M button at the right side of the first of the two ports used. The name box and M button in the second port should turn gray and the Action selections should default to Momentary NO. (normally open)
3. Ensure that both of the Action selections for both ports are set to Momentary NO.
4. Enter a name in the text field of the CC used that is indicative of the zone it will control.
5. Click the "Save Changes" button at the top of the Onboard I/O box.
6. Follow the previous instructions for assigning a contact closure to a zone, selecting the merged ports.
7. Click the Save Changes button in the upper left corner of the Panels page.

Verify proper operation of your Switch Set:

1. Press the ON switch. Circuits in the selected zone should immediately begin actuating.
2. The ON indicator should flash steadily until all of the circuits are in the on state.
3. When the zone has completed, the ON indicator should remain constantly lit.
4. Press the OFF switch. Circuits in the selected zone should immediately begin actuating.
5. The ON indicator should flash steadily until all of the circuits are in the off state.
6. When the zone has completed, the ON indicator should remain constantly dark. Note: When using two illuminate pushbuttons the OFF indicator will remain constantly lit when the zone has completed. (OFF indicator will extinguish immediately when ON is pressed again.)

Email Alert Setup

Follow these steps to set an email alert


1. Go to Setup Alerts tab
2. Enter email addresses.
3. Select alert types (tripped circuit, BO/EO/EL, On Recovery and/or Temperature)
4. If using Temperature alerts, enter the temperature threshold.

Figure 5-21

Email Alerts										
Enter the alert contact email where alert messages should be sent										
	Enter email address(es)	Breaker Trip	BO/EO/EL	On Recovery	Temp	Current Monitoring Only:				
						Branch Overcurrent	Phase Loss			
Alert Contact 1:	<input type="text" value="dan@lyntec.com"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
Alert Contact 2:	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
Alert Contact 3:	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
Alert Contact 4:	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
Alert Contact 5:	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
Repeats:	<input checked="" type="radio"/> Hourly <input type="radio"/> Daily <input type="radio"/> Weekly				> 150	*F	> 15	A	< 85	V
Ends:	<input type="radio"/> Never <input checked="" type="radio"/> After <input type="text" value="2"/> Emails									
If your firewall settings prevents alert messages from being sent by the embedded SMTP server, or if your ISP blocks SMTP port 25, enter a remote SMTP server that alert email messages can be routed through. Some SMTP servers will reject non-fully qualified hostnames, so you may need to change the hostname on this device to FQDN format, e.e. use myhost.domain.com instead of myhost .										
SMTP server:	<input type="text" value="mail.lyntec.com"/>			Port:	<input type="text" value="25"/>					
	<input type="checkbox"/> Use SSL (usually port 465)									
User:	<input type="text" value="rpc_v2@lyntec.com"/>			Optional						
Password:	<input type="text" value="dan321"/>			Optional						
Message:	<input type="text" value="Alert message from RPC Panel"/>									
<input type="button" value="Send Test Message"/>										

Chapter Six: Operating your XPC

Figure 6-1

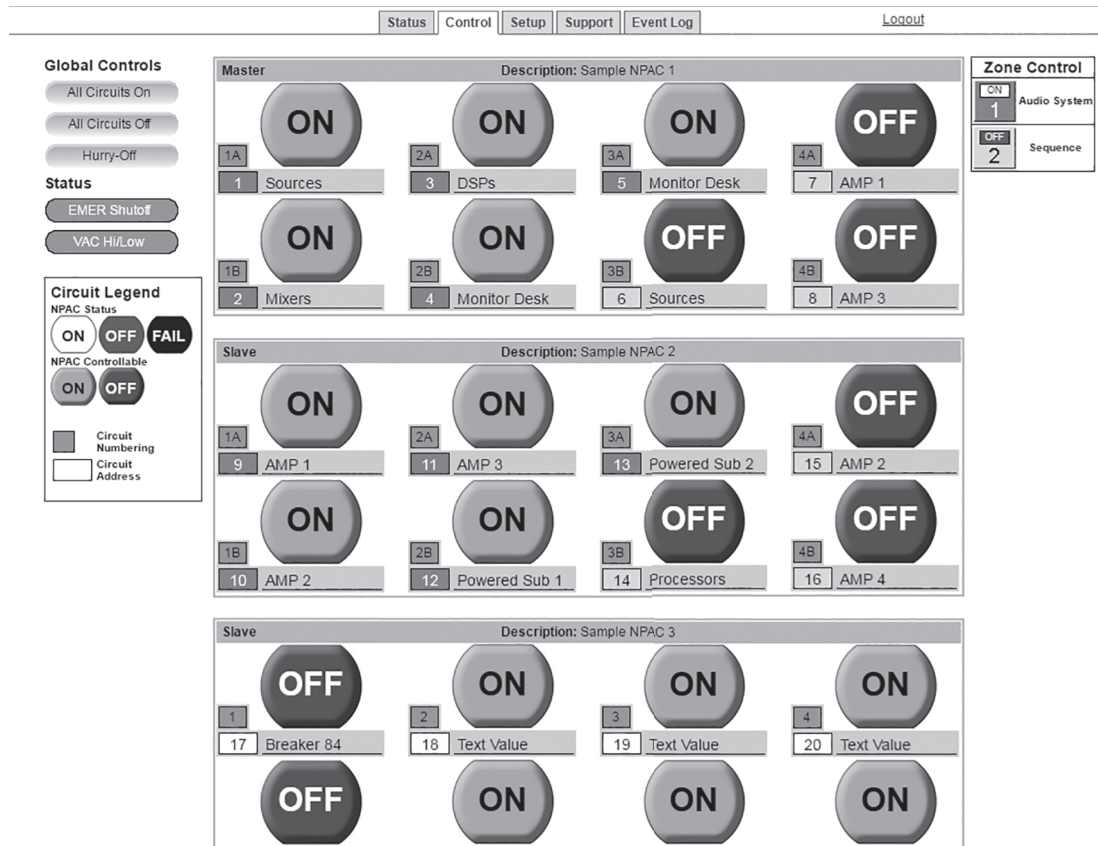

Using the built-in web page

To operate the XPC using the built in web page, select the control tab from the top of the page. Once on the CONTROL page, simply click each circuit for individual control. Or, click a zone for zone control. "All Circuits ON" and "All circuits OFF" commands can also be executed

Using a secondary controller

For DMX and sACN follow the manufacturer's instructions using the DMX addresses entered in the NETWORK page (see page 16).

TCP/IP schemes are in Appendix B (page 38).

Appendix A--Telnet and TCP/IP Protocols

TELNET PROTOCOL

Note: Telnet port = 23. Send Telnet commands to XPC IP address/23 (e.g. 192.168.1.250/23)

Table B-1 Command Codes

Command	Decimal	Hexidecimal
Start Byte	176	0xB0
Activate circuits	180	0xB4
Deactivate circuits	181	0xB5
Request all circuits status	183	0xB6
Activate zones	183	0xB7
Deactivate zones	184	0xB8
Request zones status	185	0xB9
Event ON	186	0xBA
Event OFF	187	0xBB
Event status	188	0xBC
Request circuits status	189	0xBD
Request bus status	190	0xBE
Circuit status identifier	200	0xC8
Zone status identifier	201	0xC9
Event status identifier	202	0xCA
Emergency override identifier	203	0xCB
Checksum identifier	204	0xCC
Checksum digits	205-214	0xCD - 0xD6
Stop byte	240	0xF0

Addressing Scheme

Circuit address:

1 byte. Numbers 1 through 168 (0x01 - 0xA8) are assigned to populated circuits in sequential order

Zone number: 1 byte (1-12)

Circuit Related Commands

Activate circuits

0xB0, 0xB4, circuit_address_1, ..., circuit_address_m, 0xF0

circuit_address_1, ..., circuit_address_m - addresses of circuits to be activated $m \leq 168$

Deactivate circuits

0xB0, 0xB5, circuit_address_1, ..., circuit_address_n, 0xF0
circuit_address_1, ..., circuit_address_n - addresses of
reakers to be deactivated $n \leq 168$

Activate/deactivate circuits

0xB0, 0xB5, circuit_address_1, ..., circuit_address_m, 0xB6,
circuit_address_1, ..., circuit_address_n, 0xF0
circuit_address_1, ..., circuit_address_m - addresses of
circuits to be activated circuit_address_1, ..., circuit_
address_n - addresses of circuits to be deactivated
 $m+n \leq 168$

Request all circuits status

0xB0, 0xB6, 0xF0

Request circuits status

0xB0, 0xBD, circuit_address_i, circuit_address_j, ...,
circuit_address_n, 0xF0
circuit_address_1, ..., circuit_address_n - addresses of
circuits, status of which is requested

Request bus status

0xB0, 0xBE, bus, 0xF0
bus=0-7 - number of bus, status of which is requested

Reply to activate/deactivate circuits command: status of updated circuits

0xB0, 0xC8, circuit_address_i, circuit_status_i, circuit_
address_j, circuit_status_j, ..., circuit_address_n, circuit_
status_n, 0xF0
circuit_address_i, circuit_status_i, circuit_address_j,
circuit_status_j, ..., circuit_address_n, circuit_status_n

Addresses and status of circuits updated by the command reply is generated for

Reply to request circuits status command:

Same format as “Request Bus Status”; contains addresses and status of the circuits specified in the request command

Reply to request all circuits status command: status of all circuits

0xB0, 0xB6, byte_1, ..., byte_84, 0xF0

byte_i: bits 7-4: status of circuit # 2i, bits 3-0: status of circuit # 2i-1, i=1-84

Reply to request bus status command: status of all circuits of the requested bus

0xB0, 0xBE, byte_1, ..., byte_11, 0xF0

byte_i format is identical to 3.9, except i=1-11

Zone Related Commands

Circuit status description (4 bits) (3,5 &6 panels only)

Value	1	2
Status	Off	On

Activate zone

0xB0, 0xB7, zone_number_1, ..., zone_number_m, 0xF0

zone_number_1, ... zone_number_m - numbers of zones to be activated m<=12

Deactivate zone

0xB0, 0xB8, zone_number_1, ..., zone_number_n, 0xF0

zone_number_1, ... zone_number_n - numbers of zones to be deactivated n<=12

Activate/deactivate zone

0xB0, 0xB7, zone_number_1, ... zone_number_m, 0xB8, zone_number_1, ..., zone_number_n, 0xF0

zone_number_1, ... zone_number_m - numbers of zones to be activated
zone_number_1, ... zone_number_n -

numbers of zones to be deactivated $m+n \leq 12$

Request zones status

0xB0, 0xB9, 0xF0

Reply to activate/deactivate zone command: status of updated zones

0xB0, 0xC9, zone_address_i, zone_status_i, zone_address_j, zone_status_j, ..., zone_address_n, zone_status_n, 0xF0

zone_address_i, zone_status_i, zone_address_j, zone_status_j, ..., zone_address_n, zone_status_n - addresses and status of zones updated by the command reply is generated for

Reply to request zone status command: status of all 12 zones

0x40, 0xB9, byte_1, byte_2, byte_3, 0x80

byte_i: bits 7-6: status of zone # 4i, bits 5-4: status of zone 4i-1, bits 3-2: status of zone 4i-2, bits 1-0: status of zone 4i-3, i=1-3

Event Related Commands

Zone status description (2 bits)

Value	1	2	3
Status	Off	On	Sequencing

Event ON

0xB0, 0xBA, event_number_1, ..., event_number_m, 0xF0

event_number_1, ... event_number_m - numbers of events to be turned on

$m \leq 2$

Event OFF

0xB0, 0xBB, event_number_1, ..., event_number_n, 0xF0

event_number_1, ... event_number_n - numbers of events to be turned off

$n \leq 2$

Event ON/OFF

0xB0, 0xBA, event_number_1, ... event_number_m, 0xBB,

event_number_1, ..., event_number_n, 0xF0

event_number_1, ... event_number_m - numbers of events to be activated

event_number_1, ... event_number_n - numbers of events to be deactivated

$m+n \leq 2$

Request event status

0xB0, 0xBC, 0xF0

Reply to activate/deactivate event command: status of updated events

0xB0, 0xCA, event_address_i, event_status_i, < event_address_j, event_status_j>, 0xF0

event_address_i, event_status_i, < event_address_j, event_status_j>- addresses and status of events updated by the command reply is generated for

Reply to request event status command: status of all 2 events

0xB0, 0xBC, status_byte, 0xF0

status_byte: bits 3-2: status of event #2, bits 1-0: status of event #1

Device Discovery

Event status description (1 bit)

Value	1	2	3
Status	Off	On	Processing

Beacon request

"AMX\r"

Beacon

"AMXB<-SDKClass=Utility><-Make=Lyntec><-Model=XPC><-Revision=1.1.4>\r"

Emergency override response to circuit, zone, or event on/off command

Checksum

(rev changed from 1.1.3; 1.1.3 supported old protocol)

If system is in Emergency Override mode, it replies to circuit, zone or event on/off command with emergency override response

0xB0, 0xCB, 0xF0

TCP/IP PROTOCOL

Checksum is optional. It is calculated as a sum of all bytes of the message starting with start byte and ending with TCP/IP communications and control via a third party control system is facilitated by the use of the HTTP GET command. In the example below, GET= the XPC's IP address

Example of GET command:

GET /p2.XPC?IPB002=1

Three modes of control are:

Circuit control = "B" Zone control = "Z" Event Control = "E"

Circuit Control = B

Refer to LynTec XPC browser set-up for circuit numbering

GET /p2.XPC?IPB002=1

This control string will turn circuit #2 on.

GET /p2.XPC?IPB002=0

This control string will turn circuit #2 off.

Zone Control = Z

Control of up to 167 circuits (4 panel system) is possible.

Configure your zones (circuit groups) using the LynTec XPC browser set-up when connected to the LynTec XPC panel.

GET /p2.XPC?IPZ002=1

This control string will turn zone #2 on.

GET /p2.XPC?IPZ002=0

This control string will turn zone #2 off.

Events Control = E

Events include:

- Event 1 = "All Circuits ON"
- Event 2 = "All Circuits OFF"
- Event 3 = "Hurry OFF" zips all circuits off fast.
- Event 4 = "EO" Emergency override (status only)
- Event 5 = "Audio Timer" (NA) (status only)
- Event 6 = "BO" Brown-Out (status only)
- Event 7 = "DMX/sACN"
- Event 8 = "EL" Emergency Lighting

Verification Scheme:

The following GET command will return the current status of all circuits, zones and events in the XPC system.

```
GET /p2.XPC
```

The system will return the following:

```
circuits=10110111111111111111
zones=111111111011
events=1000000
```

The above return is displaying the status of a 20 circuit circuits system in which all are presently ON, with the exceptions of circuit #2 and circuit #5, which are OFF.

The above return is also showing the status of 12 zones, all are ON with the exception of zone #10, which is OFF.

The events return is showing that event #1 is active = "All Circuits ON"

Status returns for Circuits:	Status returns for Zones and Events:
0 = OFF	0 = OFF
1 = ON	1 = ON
2 = Circuit Tripped (panels only)	2 = Processing
3 = Failure	
4 = Manual On (panels only)	
5 = Empty	

Appendix B--Troubleshooting

TROUBLESHOOTING THE XPC Use the following table if you need to troubleshoot the XPC controller.

Table B-1: XPC Controller Troubleshooting

Condition	Possible Causes	Solutions
Front panel LCD Dark, no activity	No power connected to input #1.	Connect power to input #1
Unable to connect to web page	Incorrect IP address	Verify IP address on front panel display
	Anti-Virus software on PC	Disable AV software to test
Unable to control with switch set	Incorrect wiring	Test continuity of wiring. Check to make sure solder connections are secure
	Contact closure setup incomplete	Check to make sure CC setup is complete. See Ch.5 for instructions

Inputs	Five (5) independently configurable digital inputs/ outputs
Input Types	Maintained N.O. Maintained N.C. Momentary N.O. Momentary N.C. Momentary toggle
Status Output	24 Vdc (60mA maximum load for all outputs combined) Indicator output on each I/O port
Communication Interface	RJ-45 (8P8C) Ethernet/Web Server DMX in/thru 3-wire
Circuit circuit delay	0.025 sec to 999 sec (selectable)
Environmental Standards	Operating Temperature: -5°C to +60°C (internal emperature) Storage Temperature: -20°C to 85°C Operating Humidity: 5% to 95%
Time Clock	Operation during absence of power = >2 years
Memory Retention	Program: > 20 years
Standards	Pending
ESD Immunity	IEC 1000, Level 4
RF Susceptibility	IEC 1000, Level 3
Electrical Fast Transient Susceptibility	IEC 1000, Level 3
Electrical Surge Suceptibility-- power line	IEC 1000, Level 4
Electrical Surge Suceptibility-- data line	IEC 1000, Level 3
FCC--Part 15, Class A	
ETL Tested to: Pending	